# BEOSYSTEM 2300

**Contents**

*4 Connections*
*6 Assembling*
*7 Ready for use…*
*Audio/Video system setup*
*8 Maintenance*

*This setting-up guide explains how to assemble the BeoSystem 2300 to make it ready for use. We recommend that you follow the instructions carefully.*

*See the BeoSystem 2300 user's guide (also enclosed) for detailed operating instructions.*

*Do not connect the BeoSystem to the mains until you have finished the setting-up procedure.*

Make sure that the following parts are available before you start setting up the BeoSystem 2300:

- one set of glass doors (left and right)
- one cable cover, to conceal and hold the cables on the rear of the BeoSystem
- one lead for connection to the mains
- a pair of active speakers with connectors

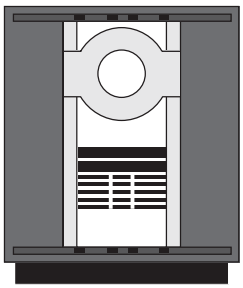



**Before you start...**

When setting up the BeoSystem 2300 we suggest you use the following sequence:

1 Place the BeoSystem where you want to use it.
2 Set up your speakers and any auxiliary equipment.
3 Connect all cables to their sockets on the rear panel of the BeoSystem (only, remember not to connect it to the mains yet!).
4 Arrange the cables in the cable cover grooves and attach the cover to the rear of the BeoSystem.
5 Attach the glass doors.
6 Connect the products to the mains.

Complete the setting-up procedure as described in the section *Ready for use* and make your presettings of sound levels, favourite radio stations, etc. as described in the User's guide for your BeoSystem 2300.

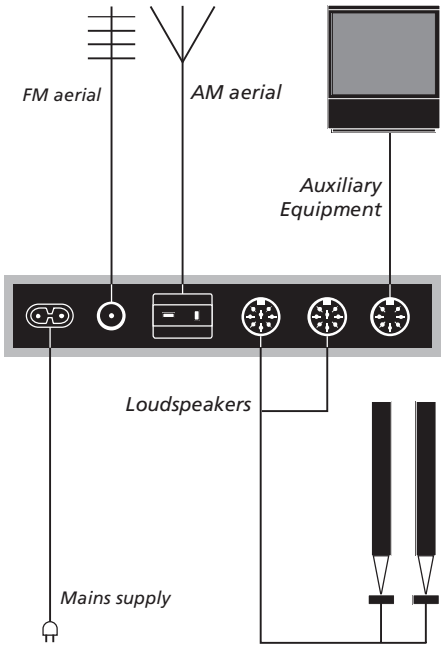


Place your BeoSystem on a firm surface, preferably on the table or sideboard where you want to use it permanently. Only, remember to leave enough space at the sides for the glass doors to open and close.

*Do not connect the BeoSystem to the mains until you have finished the setting-up procedure.*

**Aerial**
Connect your FM aerial to the socket marked FM and your AM aerial, if any, to the socket marked AM*.

If no permanent FM aerial connection is available, an indoor aerial may be hooked onto the clamp on the back of the Beo-System 2300.

**Loudspeakers**
Connect your active speakers to the sockets marked POWER-LINK.

You may choose to loop the signals through from speaker to speaker, as mentioned in the User's guide for your Beolab loud-speakers, or you may connect one speaker to each of the two sockets.

Remember to set the L • R • LINE switch on the Beolab speakers to L and R (left and right), respectively.

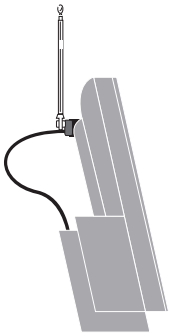

* Not all types of BeoSystem 2300 are equipped to receive stations in the AM band.

**Auxiliary equipment**
Connect your auxiliary equipment to the socket marked AUX.

This socket enables you to use compatible Bang & Olufsen equipment, e.g. an audio tape recorder, a record player, or a video system. The socket may also accommodate equipment of other makes. Consult your Bang & Olufsen dealer for details.

**Mains supply**
Plug the mains lead into the socket marked ~, but do not switch on at the mains outlet yet.

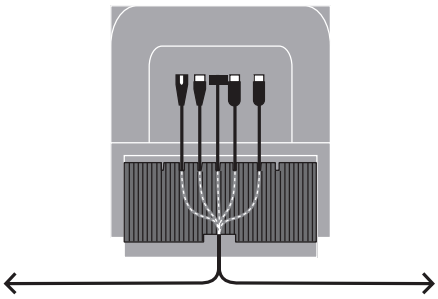

*Arrange the connector cables in the cable cover as shown above.*

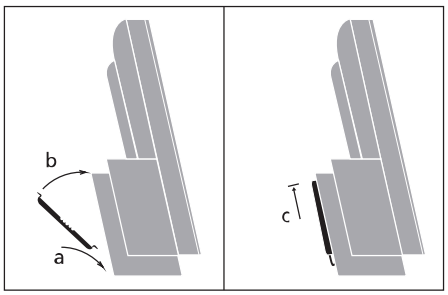


*Fasten the cable cover to the grill on the BeoSystem rear panel:*

a Insert the bottom row of pegs into the grill.
b Push the top row of pegs into the grill.
c Pull the cable cover upwards until the pegs mesh properly with the grill.

**Glass doors**
The labels on the back of the glass doors indicate which end must point upwards, and which side must point towards the middle of the BeoSystem.

Fasten the two glass doors, one at a time, to the front of the BeoSystem 2300 by pressing their fastening points into the corresponding fastening sockets on the BeoSystem. Press gently on each of the four fastening points until you hear a click. The click indicates that the glass doors are properly seated.

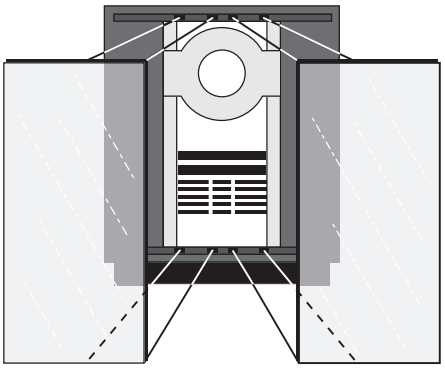

*Treat the glass doors with great care! If they crack or chip, or if they are damaged in any other way, they should be replaced immediately as they could otherwise cause bodily harm. You can order replacement doors through your Bang & Olufsen dealer.*

When you have finished setting up the BeoSystem and your other equipment, connect the it to the mains using the mains lead provided. A tiny red light appears in the BeoSystem 2300 display indicating that the system is in stand-by mode, ready to be used.

If you have a compatible Bang & Olufsen video system connected to your BeoSystem, you can control both systems using a Beo4 remote control. Your audio/video system may be placed either in one room, or it may be split up and placed with the audio system in one room and the video system in another. The audio/video system must be programmed according to your particular setup.

*The programming must be carried out with both systems switched to stand-by!*

**If your setup is placed in two rooms**
*BeoSystem 2300:*
– Hold the • button while pressing LIST, and when the Beo4 display reads OPTION?, press GO
– Press LIST to display A.OPT, and then press 2

*Video System:*
– Hold the • button while pressing LIST, and when the Beo4 display reads OPTION?, press GO
– Press LIST to display V.OPT, and then press 2

**If your setup is placed in one room**
*BeoSystem 2300:*
– Hold the • button while pressing LIST, and when the Beo4 display reads OPTION?, press GO
– Press LIST to display A.OPT, and then press 1

*Video System:*
– Hold the • button while pressing LIST, and when the Beo4 display reads OPTION?, press GO
– Press LIST to display V.OPT, and then press 1

This is the factory setup.

*Note: If you move the BeoSystem to another place, you must switch it off at the mains before unplugging the mains lead.*

# MAINTENANCE

Before you clean the BeoSystem, we recommend that you disconnect it from the mains to prevent the glass doors from opening and closing automatically. While the BeoSystem is disconnected, you may open or close the glass doors manually, if you like. It requires only a little, gentle force to do so.

Use a soft, dry cloth to wipe dust off the BeoSystem.

The glass doors can be removed and cleaned on the inside, if required. To remove the glass doors, simply grip them tightly (one at a time - while they are open) and gently but firmly unhook them from their four fastening points, pulling outwards. To clean the glass doors, we recommend that you use a mild window cleaner.

Fasten the doors again as described earlier in this guide. Leave the doors half-way open before reconnecting the BeoSystem to the mains.

*Do not use alcohol or other solvents to clean any part of the BeoSystem!*

**Environmental information**
This Bang & Olufsen product was delivered in a packing made to protect and transport the product safely from the factory to your home.
In the design of our packing we use the most conserving and recyclable materials known today, and we constantly work to reduce any negative side effects our packing materials may have on the environment. We observe any progress with great interest.

*Corrugated cardboard* Made of at least 45 % recycled material. The printing ink contains no heavy metals, and the box is reusable for paper production.

*Foamed plastic parts* Made without use of injurious inert gasses. Can be recycled or incinerated, liberating carbon dioxide and water. Usable for soil improvement in granular form.

*Plastic bags* All plastic parts are free of PVC and can be recycled or incinerated, liberating carbon dioxide and water.

*Batteries* We urge you to show consideration when changing the batteries in your remote control terminal. Used-up batteries should be disposed of and kept separately.

---

The use of any controls, adjustments or procedures other than those specified herein may result in hazardous radiation exposure.

COMPACT disc DIGITAL AUDIO

The black and yellow label on the compact disc player serves as a warning that the apparatus contains a laser system and is classified as a class 1 laser product. In case of any trouble with the compact disc player, please contact your Bang & Olufsen dealer. The apparatus must be opened by a qualified serviceman only.

This product fulfils the conditions stated in the EEC directive 89/336 and 73/23 concerning radio frequency interference.

3501962 1981

Printed in Denmark by
bogtrykkergården a-s, Struer